Subject: Re: How do I set these settings?

Posted by Hex on Wed, 14 Mar 2007 22:00:36 GMT

View Forum Message <> Reply to Message

The information is read from your motherboards DMI, which is filled in by the manufacturer of the board, afaik you can't change it