
Subject: Hard Drive swapping problems

Posted by [mildaine](#) on Tue, 01 Jul 2003 03:54:28 GMT

[View Forum Message](#) <> [Reply to Message](#)

Hey all. Im having a rather unique problem, I have tried everything I don't know to how to solve it.

I've owned C&C renegade for a while now, and I have recently set it up on my Epia system :

Epia M 800mhz
2x128mb PC133
PowerColor R7500 PCI
Samsung 8.4GB 5400RPM

Everything is fine. Installation is perfect .. when I play Online / Single player, the hard drive DOES NOT STOP swapping. The levels load fine, and I can connect to online servers .. but It's really annoying because it hinders my frame rate bigtime (Like 0.5fps). But when I play Battlefield 1942 or Quake 2, they run fine. No swapping problems. With renegade ..hell.

These are the settings I have enabled :

In Windows 98 :

- Virtual Memory set to either 150 / 450 or Automatic (makes no differnece)
- File system read ahead optimization is full.
- For hard drive settings, DMA is enabled.

In bios :

- HDD Block mode transfer is enabled.

In Renegade :

- 640x480x16bit - Low detail - 11khz audio / 8bit / stereo

If anyone can freakin' help me please do not hesitate to drop a reply. This is really annoying I dont know what is causing the problem.

Thanks

- Mildaine

[/u]
