

---

Subject: Re: Monitor

Posted by [IronWarrior](#) on Sat, 27 Dec 2008 12:30:24 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Plug in the VGA, start everything and while everything is running, unplug the VGA, swap it with the DVI and see if that works.

This worked for a other ATI card, might work for you as well.

Make sure your ATI drivers are updated.

---