

---

Subject: A Question

Posted by [liberator](#) on Fri, 25 Jun 2004 01:37:12 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

I've been digging around the driver settings for my GF4MX 420 and have a few questions about some of the settings.

What do the NULL PS x.x check boxes do? It's under the Performance Analysis section of "More Direct3D". Also, how many frames should I set it to render ahead?

---