Subject: Comp issues Posted by zeratul on Tue, 24 Feb 2009 03:04:57 GMT View Forum Message <> Reply to Message

My computer wont eject my disk i restarted it and it still wont does anyone know what to do?

Subject: Re: Comp issues Posted by <u>SSnipe</u> on Tue, 24 Feb 2009 03:24:09 GMT View Forum Message <> Reply to Message

Does it light up as if its on?

Subject: Re: Comp issues Posted by Genesis2001 on Tue, 24 Feb 2009 03:37:14 GMT View Forum Message <> Reply to Message

Check your (IDE? I can't remember the name) cables inside and make sure the connection between the cd drive and the motherboard are secure.

Subject: Re: Comp issues Posted by Lone0001 on Tue, 24 Feb 2009 03:52:30 GMT View Forum Message <> Reply to Message

If you need a CD out of the drive badly to open it find a paperclip(unbend it so it's long) and look for a hole on the Drive and stick it in there and presto it should open, if you want to get it working check what Zack said.

@Zack I think the other thing you were looking for is SATA

Subject: Re: Comp issues Posted by Chuck Norris on Tue, 24 Feb 2009 03:58:07 GMT View Forum Message <> Reply to Message

Do the SATA or IDE cable even need to be plugged in though? I haven't tried it, but I'm pretty sure the drive only needs power to open and close. The cable is just for transmitting the data from the disk to the system or vice versa.

The paperclip idea is your best bet, but if all cables are secure, the drive or ejecting mechanism has gone bad, which means you'll need a new one.

Yea to open/close it it doesn't need the IDE or SATA cable to be plugged in it just needs power.

Subject: Re: Comp issues Posted by IronWarrior on Tue, 24 Feb 2009 04:28:03 GMT View Forum Message <> Reply to Message

• • •

Get a pin and push the emergency button, it's a very small hole at the front.

Subject: Re: Comp issues Posted by dr3w2 on Tue, 24 Feb 2009 04:31:16 GMT View Forum Message <> Reply to Message

My drives began acting up a while back. Randomly i had no problems, othertimes it would act as if it was trying to open (you'd hear it budge) however it would just stop. I think for my situation is has to do something with the little motors/wheels (I have no clue how it works TBH) in terms of it ejected. There is either dust, something causing it to stick, or its just hardware failing.

So i use a pocket knife to play around in between the tray and it usually acts as the initial budge to get it to move out like normal. When i close it i press the button and all is normal.

Subject: Re: Comp issues Posted by <u>SSnipe</u> on Tue, 24 Feb 2009 07:09:16 GMT View Forum Message <> Reply to Message

IronWarrior wrote on Mon, 23 February 2009 20:28...

Get a pin and push the emergency button, it's a very small hole at the front.

I never noticed that till just now...wow

Subject: Re: Comp issues Posted by Genesis2001 on Tue, 24 Feb 2009 14:49:28 GMT View Forum Message <> Reply to Message Also, I just realized something. How do you close your CD drive when you could open/close it when you wanted? Do you actually push the drive close or use the little button to close the drive?

When I took my computer into my boss to see if I could get the harddrive reformatted, it turned out my primary CD drive had failed and I couldn't reformat. One cause of it to fail and not open so I could get the disk out was because I was pushing on the drive to close it which wore out the gears/motors inside that open the drive.

Subject: Re: Comp issues Posted by CarrierII on Tue, 24 Feb 2009 17:43:49 GMT View Forum Message <> Reply to Message

Zack wrote on Tue, 24 February 2009 14:49Also, I just realized something. How do you close your CD drive when you could open/close it when you wanted? Do you actually push the drive close or use the little button to close the drive?

When I took my computer into my boss to see if I could get the harddrive reformatted, it turned out my primary CD drive had failed and I couldn't reformat. One cause of it to fail and not open so I could get the disk out was because I was pushing on the drive to close it which wore out the gears/motors inside that open the drive.

Oh heck! I do that!

Subject: Re: Comp issues Posted by Genesis2001 on Wed, 25 Feb 2009 01:09:00 GMT View Forum Message <> Reply to Message

CarrierII wrote on Tue, 24 February 2009 10:43Zack wrote on Tue, 24 February 2009 14:49Also, I just realized something. How do you close your CD drive when you could open/close it when you wanted? Do you actually push the drive close or use the little button to close the drive?

When I took my computer into my boss to see if I could get the harddrive reformatted, it turned out my primary CD drive had failed and I couldn't reformat. One cause of it to fail and not open so I could get the disk out was because I was pushing on the drive to close it which wore out the gears/motors inside that open the drive.

Oh heck! I do that!

Yea, I didn't realize it was bad for the cd drive until my boss said something to me. lol :/

Subject: Re: Comp issues Posted by danpaul88 on Sat, 28 Feb 2009 09:03:56 GMT I have always known it's bad for them, but it's much quicker to do (especially when the tower is on the floor and to get to the button you have to actually reach around the disk tray), and they are fairly cheap to replace anyway. So I just give em a shove to close them Been doing it with my disk drives for as long as I can remember, and have yet to have one actually break because of it. Maybe I just got lucky so far...

Also, if you do push them to close them, don't push it all the way, just pushing it little bit usually triggers the motor to pull it in for you.

Subject: Re: Comp issues Posted by CarrierII on Sat, 28 Feb 2009 17:54:54 GMT View Forum Message <> Reply to Message

What Dan added at the base of his post is what I do.

Subject: Re: Comp issues Posted by zeratul on Fri, 06 Mar 2009 02:14:06 GMT View Forum Message <> Reply to Message

Its all good it locked or some crap becuase it kept crashing got new comp and cd out now so

Page 4 of 4 ---- Generated from Command and Conquer: Renegade Official Forums